

# Spark Plug

## Spark Plug Recommendation

|                                       |                                     |
|---------------------------------------|-------------------------------------|
| standard spark plug                   | CR7HSA (NGK) or<br>U22FSR-U (DENSO) |
| for cold climate<br>(below 5°C, 41°F) | CR6HSA (NGK) or<br>U20FSR-U (DENSO) |
| for extended high<br>speed riding     | CR8HSA (NGK) or<br>U24FSR-U (DENSO) |

Use only the recommended type of spark plug in the recommended heat range.

### NOTICE

*Using spark plugs with an improper heat range can cause engine damage.*

## Spark Plug Replacement & Inspection

Refer to *Safety Precautions* on page 84.

1. Clean any dirt from around the spark plug base.
2. Disconnect the spark plug cap. Take care to avoid damaging the spark plug wire when disconnecting the cap.
3. Using the spark plug wrench provided in the tool kit, remove the spark plug.