

# Storing Your Honda

---

## Removal from Storage

Refer to *Safety Precautions* on page 84 .

1. Uncover and clean your ATV.
2. If your ATV has been stored for more than four months — change the engine oil (page 103 ).
3. If your ATV has been stored for more than two months — ask your Honda dealer to drain and replace the fuel.
4. Perform a pre-ride inspection (page 36 ), then test-ride your ATV at low speeds.