


# Brakes

## Adjustment

### REAR

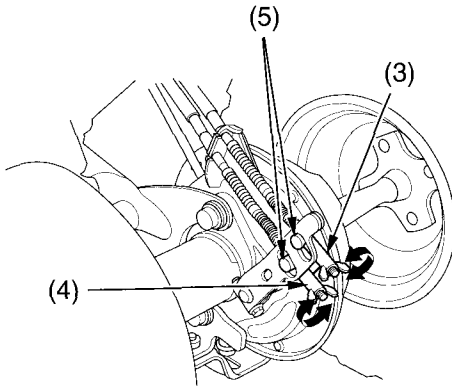

(3) brake lever adjusting nut  
(4) brake pedal adjusting nut

(5) brake arm pin

Turn the brake lever adjusting nut (3) and the brake pedal adjusting nut (4), located on the brake operating rod at the rear of the frame. Make sure the cutout on the adjusting nut is properly seated on the brake arm pin (5).

## Other Inspections

- Check that the brake lever and brake pedal assemblies are positioned properly and the securing bolts are tight.
- Make sure that the brake cables, brake arm, spring, and fasteners are in good condition.