

# Safe Riding Precautions

---


Practice with the throttle limiter adjusted as delivered until you are confident in shifting gears, braking, and making turns.

## Throttle Limiter Adjustment

1. Loosen the lock nut ( 1 ).
2. Turn the throttle limiter screw ( 2 ) clockwise to reduce throttle lever movement or counterclockwise to increase throttle lever movement.
3. Hold the screw in place and tighten the lock nut.

For higher top speed, removing the air intake restrictor is required. Adjusting for increased throttle lever movement without removing the air intake restrictor will cause the engine to run roughly at higher speeds.

## RIGHT HANDLEBAR

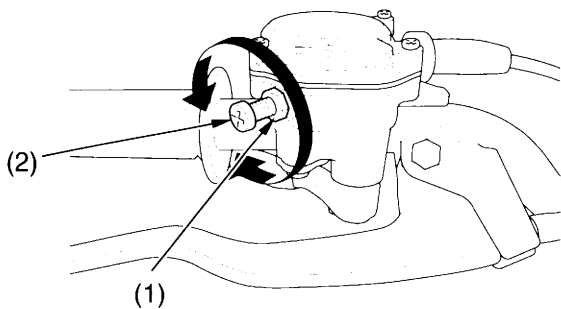

(1) lock nut

(2) throttle limiter screw