



Indicator


Neutral Indicator Lamp

The neutral indicator lamp (1) is located on the handlebar case.

The neutral indicator lamp will light when the transmission is in neutral and the ignition switch is ON (I).

If the indicator does not come on when it should, have your Honda dealer check for a burned-out bulb or other problems.

FRONT

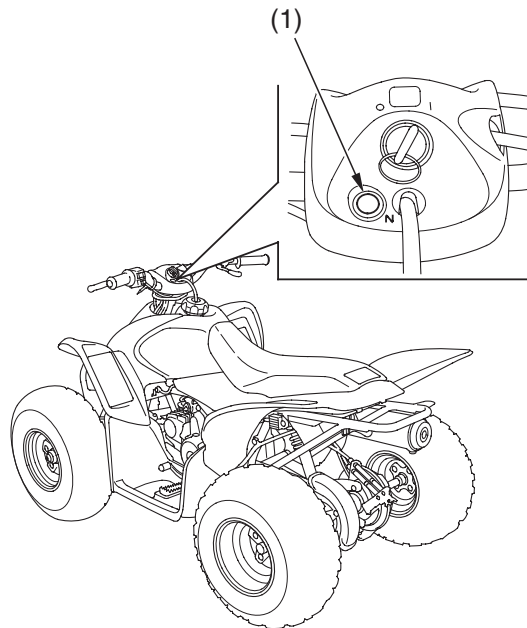

(1) neutral indicator lamp