




If a Fuse Blows

Main Fuse Access

UNDER SEAT

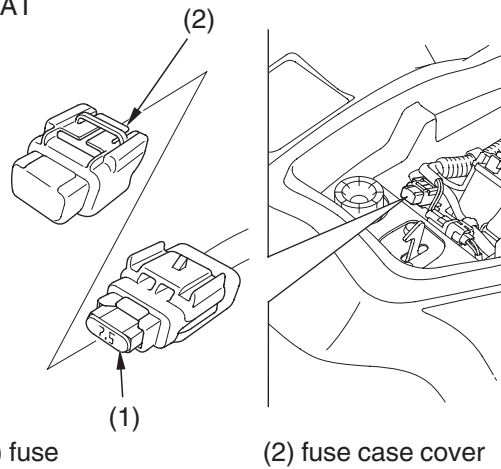

1. To prevent an accidental short circuit, turn the ignition switch OFF (\circ) before checking or replacing the fuse.
2. To access the fuse (1), remove the seat (page 95).
3. Remove the fuse case cover (2).

172 Taking Care of the Unexpected

