

Starting & Stopping the Engine

Starting Procedure


To restart a warm engine, follow the procedure for "High Air Temperature."

The starter motor will operate only when the transmission is in neutral.

Normal Air Temperature 10° — 35°C (50° — 95°F)


1. Pull the choke lever (1) up all the way to fully ON (A) if the engine is cold.
2. With the throttle 1/8 — 1/4 open, press the start button (2). (If the throttle limiter is adjusted as delivered, open the throttle fully.)

LEFT SIDE

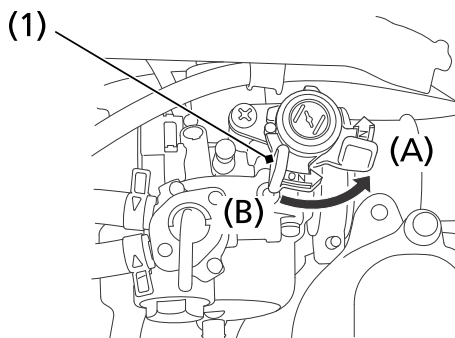

- (1) choke lever
 (A) fully ON
 (B) fully OFF

LEFT HANDLEBAR

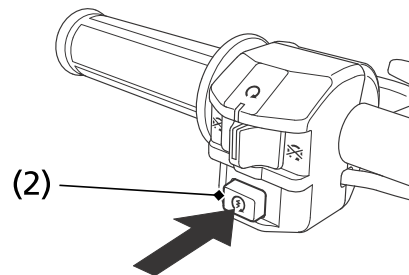

- (2) start button

- Pressing the electric start button for more than 5 seconds at a time may cause the starter to overheat and damage the starter. Release the start button for approximately 10 seconds before pressing it again.