

Switches (Continued)

(VFR1200XD)

Parking brake lever and Release button

Be sure the parking brake is applied while parking and warming up the engine.

- ▶ Make sure the parking brake lever is released before riding. To apply the parking brake lock

Pull the parking brake lever back to lock the rear wheel.


- ▶ Be sure the release button pops out and parking brake lever is not released.

- ▶ The parking brake lock will not function if the parking brake is not adjusted properly. **↪ P.78**

To release the parking brake lock

Release the parking brake lever by lightly pulling in the lever (1) and pressing the release button (2).

- ▶ Before riding, check that the parking brake indicator is turned off and make sure that the parking brake is fully released so there is no drag on the rear wheel.

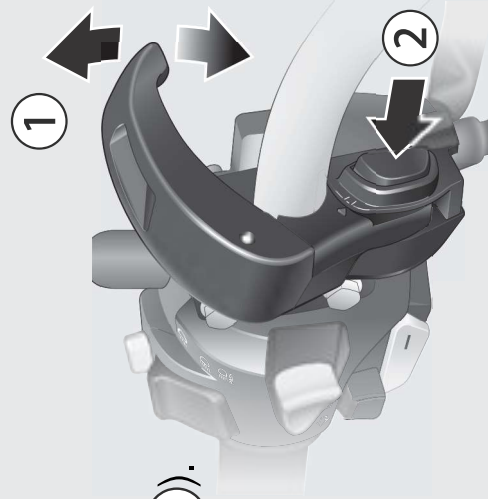




 **Hazard switch** **↪ P.34**

Shift up switch (+)

To shift up the gear. **↪ P.45**

Headlight dimmer/

Passing light control switch

-  : High beam
-  : Low beam
-  : Flashes the high beam PASS headlight.

 **Turn signal switch**

Shift down switch (-)

To shift down the gear. **↪ P.45**