


Digital clock

Shows hour and minute. To adjust time, proceed as follows:

1. Turn the main switch ON.
2. Press the RST button (1). The minute and second displays will read "00".
3. Press the "H" button (3). To advance time, keep the button down until the desired hour is displayed.
4. Press the "M" button (2). To advance, hold the button down. The display will be returned to "00" when "60" minutes are reached without affecting the hour display.

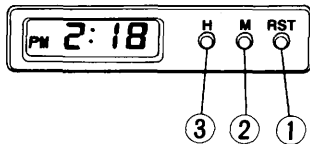

(1) RST button
(2) M button

(3) H button