


HEADLIGHT BEAM ADJUSTMENT

To adjust the headlight beam vertically, remove the fairing inner covers and turn the knob (1) in either direction.

Turn the knob (2) to adjust the headlight beam horizontally.

Obey local laws and regulations.

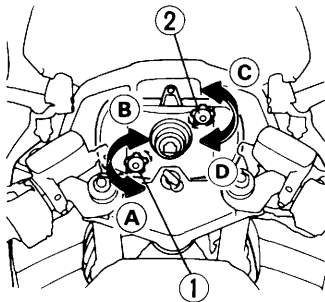

- (1) Adjusting knob (vertical)
- (2) Adjusting knob (horizontal)
- (A) Up
- (B) Down
- (C) Left
- (D) Right

▲ WARNING

- * **Do not adjust the headlight beam while riding the motorcycle. Keep both hands on the handlebars while riding.**