

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓	ODOMETER READING [ NOTE (1) ]								REFER TOP PAGE
			x 1,000 km	1	6	12	18	24	30	36	
			x 1,000 mi	0.6	4	8	12	16	20	24	
	NOTE	MONTH	6	12	18	24	30	36			
DRIVE CHAIN			I, L, EVERY 1,000km (600mi)								70-73
DRIVE CHAIN SLIDER					I			I		I	74
BRAKE FLUID	(NOTE 3)				I	I	R	I	I	R	19-22
BRAKE PADS WEAR					I	I	I	I	I	I	83
BRAKE SYSTEM			I		I			I		I	19-22
* BRAKE LIGHT SWITCH					I			I		I	94
* HEADLIGHT AIM					I			I		I	-
CLUTCH SYSTEM					I			I		I	23-24
CLUTCH FLUID	(NOTE 3)				I	I	R	I	I	R	23
SIDE STAND					I			I		I	76
* SUSPENSION					I			I		I	75
* NUTS, BOLTS, FASTENERS			I		I			I		I	-
** WHEELS/TYRES					I			I		I	-
** STEERING HEAD BEARINGS			I		I			I		I	-

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

\* \* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

NOTES: (1) At higher odometer readings, repeat at the frequency interval established here.

(2) Service more frequently when riding in dusty areas.

(3) Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.

(4) Switzerland and Austria type only.