

Fuse Box:

VFR

The fuse box is located under the right inner panel.

The specified fuses are:

10A , 20A


VFR-ABS

The fuse boxes are located under the right and left inner panels.


The specified fuses are:

10A , 20A , 30A

1. Remove the inner panel (page 66).
2. Open the fuse box cover (1).
3. Pull out the old fuse and install a new fuse.
The spare fuses (2) are located in the fuse box.
4. Close the fuse box cover and install the inner panel.

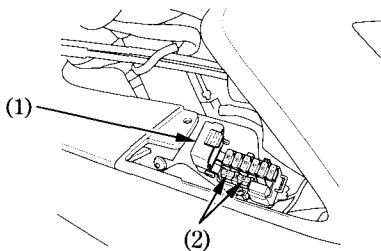

(VFR-ABS only)

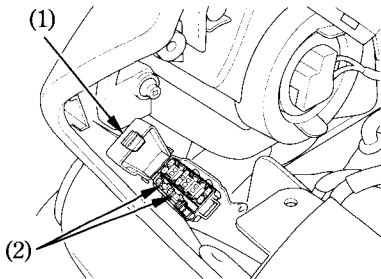

- (1) Fuse box covers
(2) Spare fuses