



### Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 3.8 litres (1.00 US gal, 0.84 Imp gal)

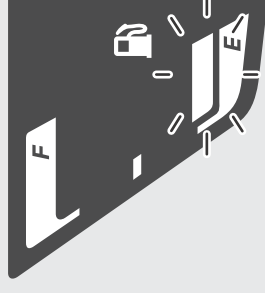

If the fuel gauge indicators repeat flashing or turned off: [▶P.99](#)

### Speedometer

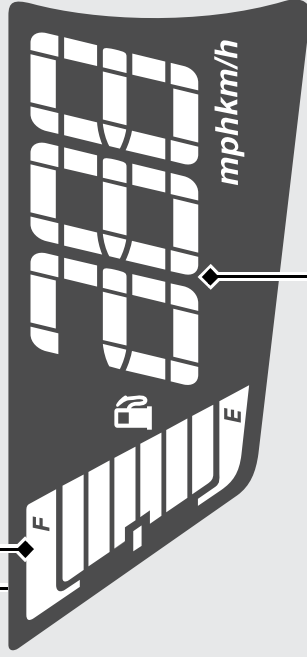

Odometer [TOTAL] & Tripmeter [TRIP A/B] & Mileage countdown [▶P.22](#)

Fuel mileage meter/Average speed/Coolant temperature gauge/Air temperature gauge [▶P.24](#)

### Handle grip heater status icon

The handle grip heater status icon will appear while the handle grip heater is on.

Clock (12-hour display)/Trip time/Handle grip heater level [▶P.28](#)

Gear position indicator [▶P.23](#)

