

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

<b>Importance of Maintenance</b> .....	P. 48	<b>Engine Oil</b> .....	P. 72
<b>Maintenance Schedule</b> .....	P. 49	<b>Coolant</b> .....	P. 76
<b>Maintenance Fundamentals</b> .....	P. 52	<b>Brakes/Clutch</b> .....	P. 78
<b>Tool kit</b> .....	P. 63	<b>Side Stand</b> .....	P. 81
<b>Removing &amp; Installing Body Components</b> ...	P. 64	<b>Drive Chain</b> .....	P. 82
Rear Seat .....	P. 64	<b>Throttle</b> .....	P. 85
Front Seat .....	P. 65	<b>Other Adjustments</b> .....	P. 86
Single Seat Cowl .....	P. 66	Clutch and Brake Levers .....	P. 86
Under Cowl .....	P. 68	Front Suspension .....	P. 87
Clip.....	P. 69	Rear Suspension .....	P. 89
Battery Cover .....	P. 70	Headlight Aim .....	P. 90
Battery.....	P. 71	Front Seat Height .....	P. 91