


INNER COWL

Removal:

1. Remove the front cowl (page 53).
2. Remove the clips (1).

Installation:

- Installation can be done in the reverse order of removal.

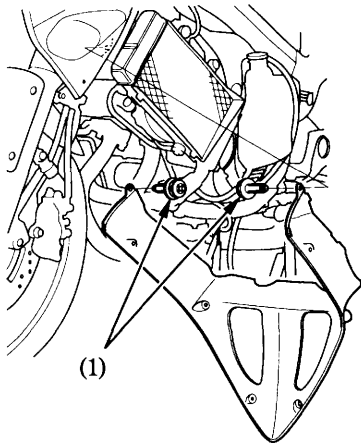

(1) Clips