

Ref. No.	Description	Function
1	Tripmeter	Shows mileage per trip.
2	Speedometer	Shows riding speed.
3	Odometer	Shows accumulated mileage.
4	Neutral indicator (green)	Lights when the transmission is in neutral.
5	Turn signal indicator (green)	Flashes when the turn signal operates.
6	High beam indicator (blue)	Lights when the headlight is on high beam.
7	Coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature. Should light when ignition switch is ON and engine is not running. Should go out after a few seconds. If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 19–21 and do not ride the motorcycle until the problem has been corrected.</p> <p>CAUTION:</p> <p>* Exceeding maximum running temperature may cause serious engine damage.</p>

INCORRECT INFO