

Ref. No.	Description	Function
8	Low oil pressure indicator (red)	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION:</p> <p>* Running the engine with insufficient oil pressure may cause serious engine damage.</p>
9	Tripmeter reset knob	Resets tripmeter to zero (0). Turn knob in direction shown.