


### Front Brake Lever:

The distance between the tip of the brake lever (1) and the grip can be adjusted by turning the adjuster (2).

#### **CAUTION:**

**\* Align the arrow (3) on the brake lever with index mark (4) on the adjuster.**

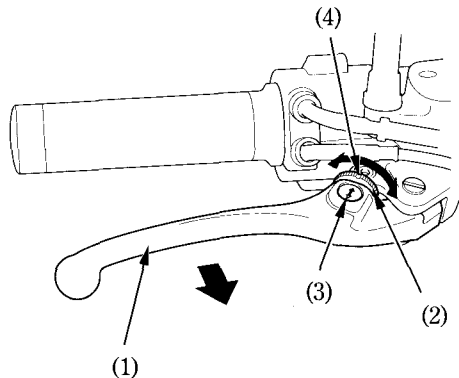

(1) Front brake lever  
(2) Adjuster

(3) Arrow  
(4) Index mark