


Installation:

1. Position the wheel between the fork legs, install the brake disk between the brake pads taking care not to damage the brake pads.
2. Insert the front axle shaft from the left side, through the left fork leg and wheel hub.
3. Position the lug (6) on the speedometer gearbox against the left fork leg.
4. Align the index line (7) of the axle shaft with the surface (8) of fork leg.
5. Tighten the axle pinch bolts on the left fork leg to the specified torque:
22 N·m (2.2 kgf·m , 16 lbf·ft)
6. Tighten the axle bolt to the specified torque:
59 N·m (6.0 kgf·m , 43 lbf·ft)

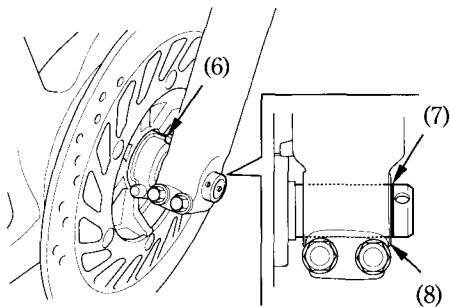

- (6) Lug
(7) Index line
(8) Surface