

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING (NOTE (3))				Refer to
			1,000 km (600 mi.)	6,000 km (3,600 mi.)	12,000 km (7,200 mi.)	18,000 km (10,800 mi.)	
DRIVE CHAIN	EVERY		I L EVERY 1,000 km (600 mi)				Page 146
BATTERY	MONTH		I	I	I	I	Page 154
BRAKE FLUID (FRONT)	MONTH I 2 YEARS *R		I	I	I	*R	Page 126
BRAKE SHOE/PAD WEAR				I	I	I	Pages 128, 134
BRAKE SYSTEM			I	I	I	I	Pages 126-135
* BRAKE LIGHT SWITCH			I	I	I	I	
* HEADLIGHT AIM			I	I	I	I	
CLUTCH			I	I	I	I	Page 122
SIDE STAND				I	I	I	Page 136
* SUSPENSION			I	I	I	I	
* NUTS, BOLTS, FASTENERS			I	I	I	I	
** WHEELS			I	I	I	I	
** STEERING HEAD BEARING			I	I	I	I	

- * SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED REFER TO THE OFFICIAL HONDA SHOP MANUAL.
- ** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTE: (1) Service more frequently when riding in dusty areas.
 (2) Service more frequently when riding in rain or at full throttle.
 (3) For high odometer readings, repeat at the frequency interval established here.