


SIDE STAND

(Refer to Maintenance Precautions on page 58).

Check the rubber pad for deterioration and wear. Replace if wear extends to the wear line (See (1) in the picture). Check the side stand assembly for freedom of movement. If parts must be replaced, please contact an authorized HONDA dealer.

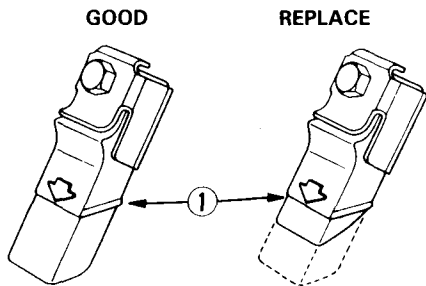

(1) Wear line