

Ref. No.	Description	Function
1	Speedometer	Shows riding speed.
2	Odometer	Shows accumulated mileage.
3	Tripmeter	Shows mileage per trip.
4	Coolant temperature gauge	Shows coolant temperature (see page 10).
5	Tachometer	Shows engine rpm.
6	Tripmeter reset knob	Resets tripmeter to zero (0) by pushing the knob.
7	Oil pressure warning light (red)	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION: * Running the engine with insufficient oil pressure may cause serious engine damage.</p>