


## WHEEL REMOVAL

(Refer to the maintenance precautions on page 55).

### NOTE:


- \* This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your authorized Honda dealer for this service.

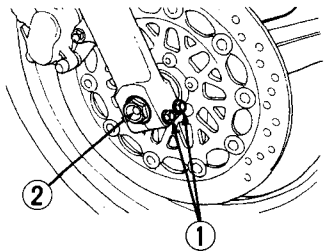

(1) Axle pinch bolts      (2) Axle bolt

## Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Loosen the right and left axle pinch bolts (1) and remove the axle bolt (2).  
Remove the front axle (3) and wheel.

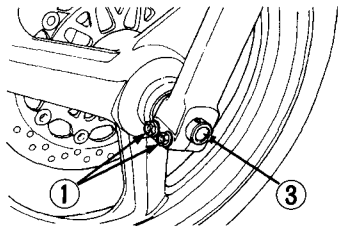

(1) Axle pinch bolts      (3) Axle