 
## **Digital Clock**

Shows hour and minute. To adjust the time, proceed as follows:

- 1. Turn the ignition switch ON.
- 2. Push and hold the button (2) for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.
  - (2) (2:30) (1) (2:30) (2:30) (2:30) (2:30) (3:30) (

- 3. To set the hour, push the button until the desired hour is displayed.
  - The time is advanced by one hour, each time the button is pushed.



- (1) Digital clock
- (2) Odometer/Tripmeter/Digital clock select and reset button