

Fuse Box:

The fuse box (1) is located behind the right side cover.

The specified fuse are:

20A, 10A

1. Remove the right side cover (page 51).
2. Open the fuse box cover (2).
3. Pull out the old fuse and install a new fuse.
The spare fuses (3) are located in the fuse box.
4. Close the fuse box cover and install the right side cover.


FI Fuse:

The FI fuse (4) is located behind the right side cover.

The specified fuse is:

15A

1. Remove the right side cover (page 51).
2. Open the FI fuse box cover (5).
3. Pull out the old fuse and install a new fuse.
The spare FI fuse (6) is located in the FI fuse box (7).
4. Close the FI fuse box cover and install the right side cover.

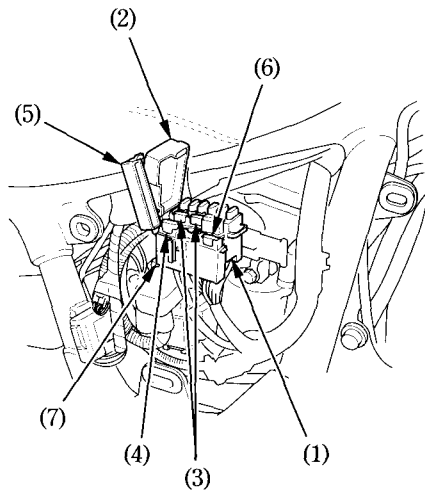

- (1) Fuse box
- (2) Fuse box cover
- (3) Spare fuses
- (4) FI fuse

- (5) FI fuse box cover
- (6) Spare FI fuse
- (7) FI fuse box