



Stop/Taillight Bulb

1. Remove the taillight lens (1) by removing the two screws (2).

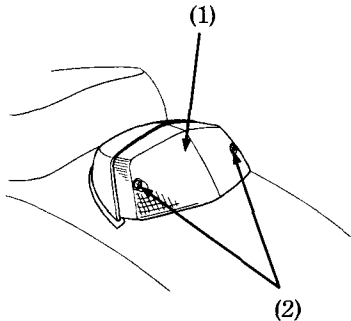

(1) Taillight lens
(2) Screws

2. Slightly press the bulb (3) and turn it counterclockwise.
3. Install a new bulb in the reverse order of removal.

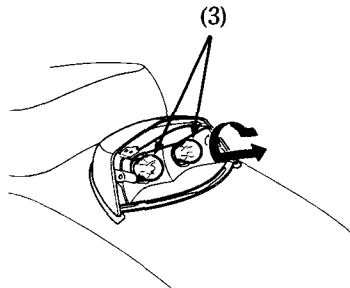

(3) Bulbs