


## ESSENTIAL INDIVIDUAL COMPONENTS

### IGNITION SWITCH


The ignition switch (1) is on front of left side cover.

〈Except AR type〉

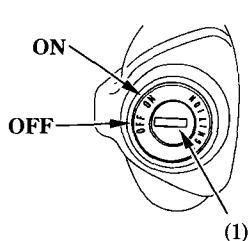

(1) Ignition switch

〈AR type〉

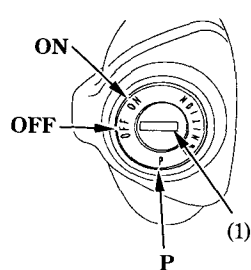

Key Position	Function	Key Removal
<b>P (parking)</b> (AR type only)	For parking the motorcycle near traffic. The taillight is on, but all other lights are off. The engine cannot be started.	Key can be removed
<b>OFF</b>	Engine and lights cannot be operated.	Key can be removed
<b>ON</b>	Engine and light can be operated.	Key cannot be removed