

MAJOR COMPONENTS (Information you need to operate this motorcycle)

▲WARNING

*** If the Pre-ride Inspection (page 36) is not performed, severe personal injury or vehicle damage may result.**


SUSPENSION

Rear Suspension

The spring preload adjuster (1) has 7 spring preload positions for different load or riding conditions.

Remove the left side cover (page 34). Use the pin spanner to adjust the rear shock. Position 1 is for light loads and smooth road conditions.

Positions 2 to 7 increase spring preload for a stiffer rear suspension and can be used when the motorcycle is more heavily loaded. Standard position : 2

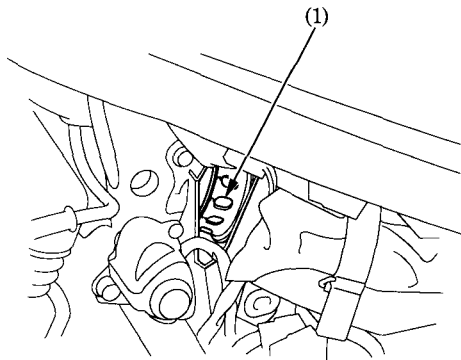

(1) Spring preload adjuster