

<b>(Ref.No.) Description</b>	<b>Function</b>
(1) Speedometer	Shows riding speed. This shows your speed in kilometers per hour (km/h) and/or miles per hour (mph) depending on the type.
(2) Turn signal indicator (amber)	Flashes when either turn signal operates.
(3) Immobilizer system (HISS) indicator (red)	This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at $\bigcirc$ (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 40 ). When the blinking function of this indicator is valid and the ignition switch is OFF, it keeps blinking for 24 hours (page 41 ).
(4) High beam indicator (blue)	Lights when the headlight is on high beam.