

WHEEL REMOVAL


Refer to the Safety Precautions on page 51 .

This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required, it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your Honda dealer for this service.

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Loosen the axle pinch bolts (1).
3. Unscrew and remove the front axle shaft (2). Remove the wheel.

Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your Honda dealer for this service.

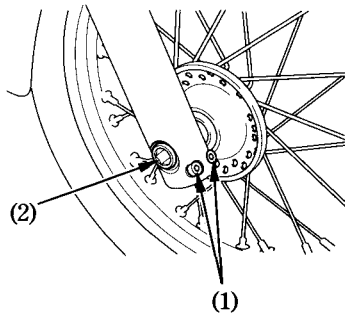

- (1) Axle pinch bolts
(2) Front axle shaft