


### Main Fuse:

The main fuse (1) is located behind the right side cover.

The specified fuse is:  
**30A**

1. Remove the right side cover (page 48).
2. Disconnect the wire connector (2) of the starter magnetic switch (3).
3. Pull out the fuse. If the main fuse is blown, install a new fuse.  
The spare fuse (4) is located under the starter magnetic switch.
4. Reconnect the wire connector and install the right side cover.

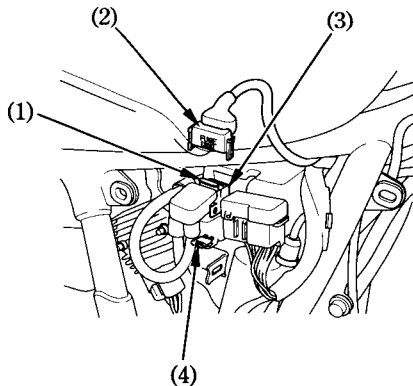

- |                             |                |
|-----------------------------|----------------|
| (1) Main fuse               | (4) Spare fuse |
| (2) Wire connector          |                |
| (3) Starter magnetic switch |                |