

<b>(Ref.No.) Description</b>	<b>Function</b>
(5) Coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature. If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 24 – 25 and do not ride the motorcycle until the problem has been corrected.</p> <p><b>NOTICE</b> Exceeding maximum running temperature may cause serious engine damage.</p>
(6) Odometer/Tripmeter display	Shows odometer and tripmeter.
Odometer	Shows accumulated mileage (page 16 ).
Tripmeter 1 and 2	Shows mileage per trip (page 16 ).