

Maintenance Schedule

ITEM		FREQUENCY	NOTE	ODOMETER READING (Note 1)							Refer to page		
				× 1,000 mi	0.6	4	8	12	16	20		24	
				× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
EMISSION RELATED ITEMS	*	FUEL LINE										—	
	*	THROTTLE OPERATION										—	
	*	CARBURETOR CHOKE										—	
		AIR CLEANER	2						R			R	90
	*	SUB AIR CLEANER							R			R	—
		CRANKCASE BREATHER	3			C	C	C	C	C	C	C	92
		SPARK PLUGS					R		R		R		104
	*	VALVE CLEARANCE											—
		ENGINE OIL				INITIAL = 600mi (1,00km) or 1month : R REGULAR = EVERY 8,000mi (12,800km) or 12months : R						76	
		ENGINE OIL FILTER				R		R		R		R	81
	*	ENGINE IDLE SPEED											102
		RADIATOR COOLANT	5									R	86
	*	COOLING SYSTEM											—
*	SECONDARY AIR SUPPLY SYSTEM											—	
*	EVAPORATIVE EMISSION CONTROL SYSTEM	4										—	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 194).