


Storage Compartment

LEFT SIDE

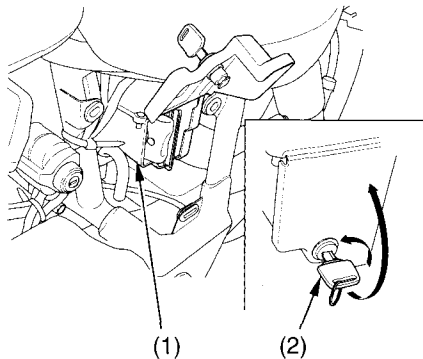

- (1) storage compartment
- (2) ignition key

The storage compartment (1) is located behind the left side cover (page 71).

The tool kit and owner's manual (and other documents) should be stored in the storage compartment.

To open the storage compartment (1), remove the left side cover (page 71). Insert the ignition key (2) and turn it 90 degrees counterclockwise. Open the storage compartment.

To close the storage compartment (1), close the storage compartment. Turn the ignition key 90 degrees clockwise and remove it. Install the left side cover (page 71).