


Battery

The battery is located in the battery box below the seat.

Removal

1. Make sure the ignition switch is OFF.
2. Remove the seat (page 72).
3. Remove the ignition control module (1).
4. Remove the battery cover (2) by removing the screw (3).


UNDER SEAT

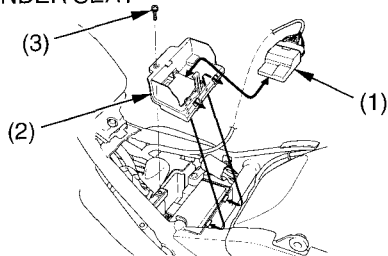

- (1) ignition control module (2) battery cover
(3) screw

5. Disconnect the negative (-) terminal lead (4) from the battery first.
6. Disconnect the positive (+) terminal lead (5).
7. Pull the battery (6) out of the battery box.

UNDER SEAT

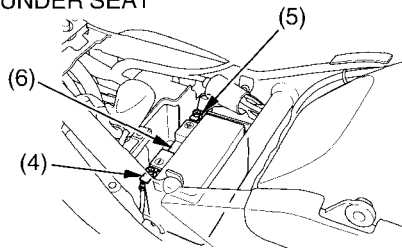

- (4) negative (-) terminal lead
(5) positive (+) terminal lead
(6) battery

(cont'd)