

## SIDE COVER



The right side cover must be removed to inspect fuse. The left side cover must be removed to access the tool kit.

### Side cover removal:

1. Pull the side cover (1) out until the two prongs (2).
2. Slide the side cover sidewise to release the hook (3) from the frame (4).

### Side cover installation:

1. Insert the hook (3) into the frame (4).
2. Insert the two prongs (2) into the frame grommets.

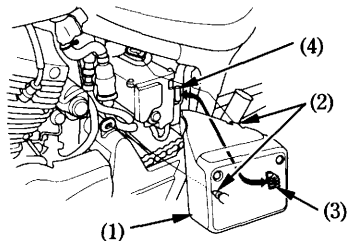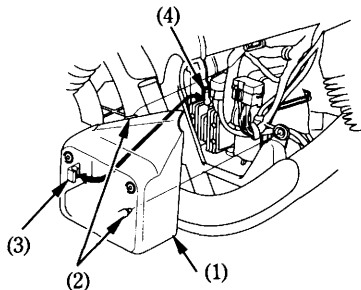

(1) Side cover  
(2) Prongs

(3) Hook  
(4) Frame