

SEAT


The seat must be removed for battery maintenance.

Seat removal:

1. Remove the seat belt (1) by removing the bolts (2) and collars (3).
2. Pull the seat (4) back and up.

Seat installation:

1. Position the seat so the hole (5) on the back center is aligned with the hook (6) on the rear fender.
2. Insert the hook in the seat hole and insert the tab (7) into the recess under the frame.
3. Install the seat belt in the reverse order of removal.

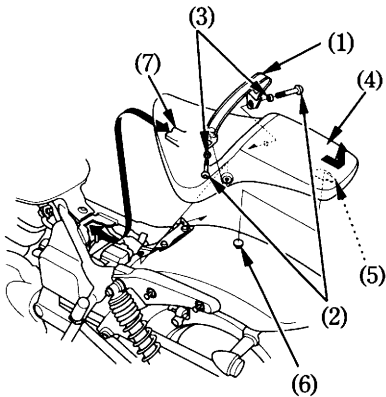

(1) Seat Belt

(2) Bolts

(3) Collars

(4) Seat

(5) Hole

(6) Hook

(7) Tab