

<b>(Ref.No.) Description</b>	<b>Function</b>
(6) Odometer/Tripmeter display	ODO: shows accumulated mileage. TRIP: shows mileage per trip.
(7) Tripmeter reset button and Odometer/Tripmeter select button	This button is used to reset the tripmeter or to select the tripmeter or odometer (page 14 ).
(8) Low oil pressure indicator (red)	<p>Lights when the engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p><b>NOTICE</b></p> <p>Running the engine with insufficient oil pressure may cause serious engine damage.</p>