


Make sure the cut-out on the adjusting nut is seated on the brake arm pin (5) after making final free play adjustment.
If proper adjustment cannot be obtained by this method see your Honda dealer.

5. Apply the brake several times and check for free wheel rotation after the brake pedal is released.

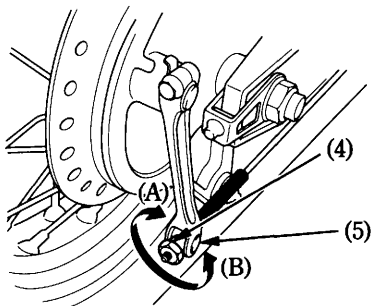

- | | |
|-------------------|------------------------|
| (4) Adjusting nut | (A) Decrease free play |
| (5) Arm pin | (B) Increase free play |

Other Checks:

Make sure the brake rod, brake arm, spring and fasteners are in good condition.