

FEATURES


(Not required for operation)

STEERING LOCK

The steering lock (1) is on the steering column.

To lock the steering, turn the handlebar all the way to the right, insert the steering key into the lock, turn the key counterclockwise as far as possible. Then, press the lock all the way in, turn the key back to the original position, and remove the key.

To unlock the steering, perform the locking sequence in the reverse order.

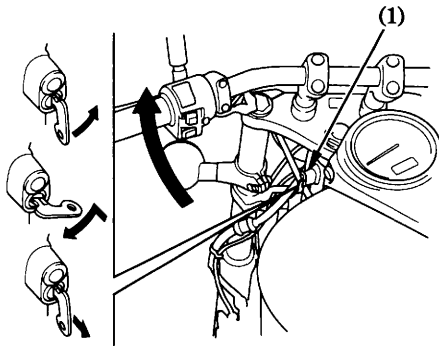

(1) Steering Lock