

## SEAT

The seat must be removed for battery maintenance.

### Removal:


1. Remove the seat mounting bolts (1).
2. Pull the seat (2) back and up.

### Installation:

1. Position the seat so the hole (3) on the rear of the seat align with the hook (4) on the rear fender.
2. Insert the hook in the seat hole and insert the tab (5) into the recess under the frame.
3. Install and tighten the seat mounting bolts to the specified torque.

Seat mounting bolts torque:

26 N·m (2.7 kgf·m , 19 lbf·ft)

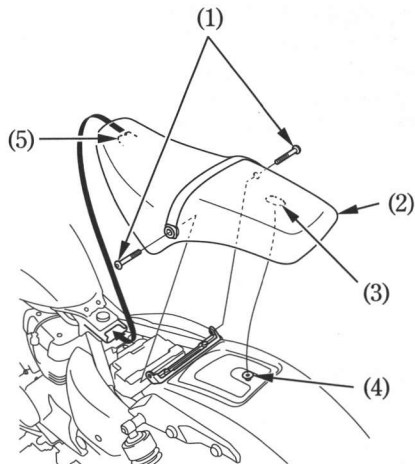

- |                         |          |
|-------------------------|----------|
| (1) Seat mounting bolts | (4) Hook |
| (2) Seat                | (5) Tab  |
| (3) Hole                |          |