- Lights and horn—check that headlight, brake/tail light, position light (except U type), turn signals, indicators and horn function properly.
- 9. Engine stop switch—check for proper function (page 51).
- 10. Side stand ignition cut-off system—check for proper function (page 98).