



3. Loosen the right and left axle pinch bolts (3), and remove the front axle bolt (4).
4. Remove the front axle shaft (5), front wheel and side collar.

Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your Honda dealer for this service.

Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.

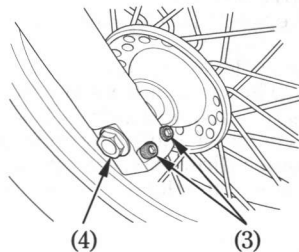

(3) Axle pinch bolts      (4) Front axle bolt

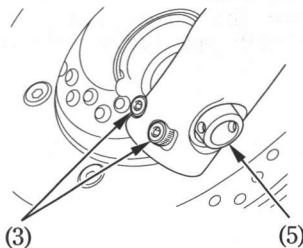

(3) Axle pinch bolts      (5) Front axle shaft