

4. —Headlight bulb:

- Remove the seat rubber (4).
- Remove the headlight bulb (5) while pressing down on the pin (6).

—Position light bulb:

(F, ED type)

- Pull out the socket (7).
- Slightly press the position light bulb (8) and turn it counterclockwise.

—Position light bulb:

(E type)

- Pull out the socket (7).
- Pull out the position light bulb (8) without turning.


5. Install a new bulb in the reverse order of removal.

(F, ED, U type)

- Install the seat rubber with its arrow mark (9) facing up.

(E type)

- Install the seat rubber with its “TOP” mark (10) facing up.

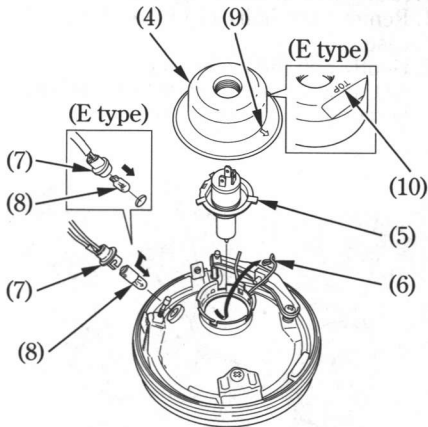

- (4) Seat rubber
- (5) Headlight bulb
- (6) Pin
- (7) Socket

- (8) Position light bulb
- (9) Arrow mark
- (10) “TOP” mark