



4. Remove the spark plug cap (5) from the spark plug, and remove the spark plug using the spark plug wrench (6) furnished in the tool kit.

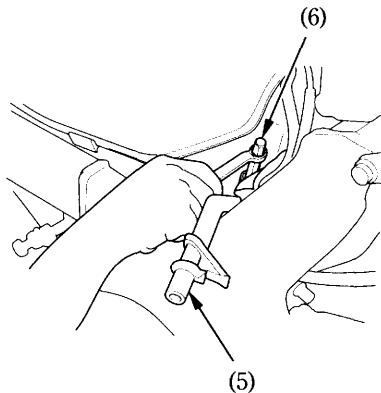

- (5) Spark plug cap
(6) Spark plug wrench

5. To remove the plug from the front cylinder, remove the spark plug cap (7) from the spark plug, and remove the spark plug using the spark plug wrench (8) furnished in the tool kit.

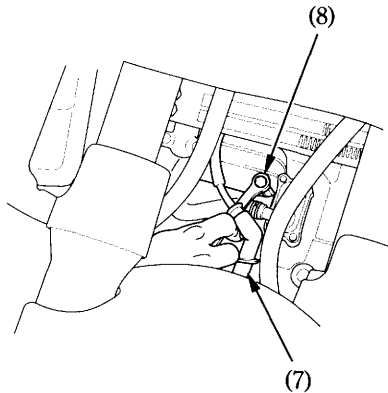

- (7) Spark plug cap
(8) Spark plug wrench