

## MAJOR COMPONENTS

### (Information you need to operate this motorcycle)

#### SUSPENSION

##### Front Suspension

##### Spring Preload:

Adjust the spring preload by turning the preload adjuster (1) with the  $10 \times 14$  mm wrench provided in the tool kit.

Make sure that both fork legs are adjusted to the same position.

To reduce (SOFT) :

Turn the adjuster counterclockwise toward SOFT for a light load and smooth road condition.


To increase (HARD) :

Turn the adjuster clockwise toward HARD for a firmer ride and rough road condition.

To adjust the adjuster to the standard position, proceed as follows :

1. Turn the adjusters until the fourth groove from the top aligns with the top surface of the fork caps.
2. Make sure that both fork legs are adjusted to the same position.

Standard position

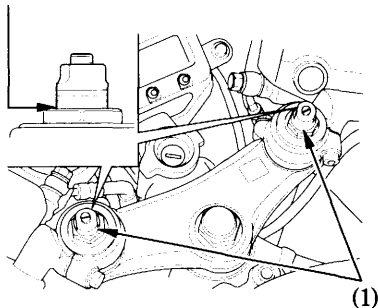

(1) Preload adjuster