


## ENGINE UNDER COVER

### Removal:

1. Remove the bolts (1) and washers (2).
2. Remove the engine under cover (3).

### Installation:

- Installation can be done in the reverse order of removal.

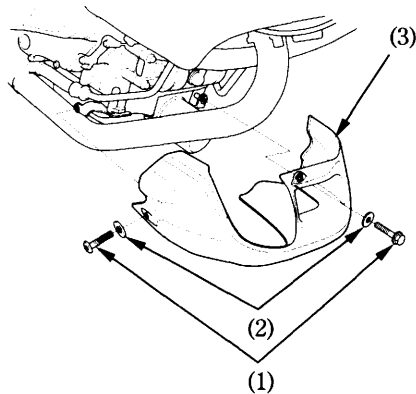

- (1) Bolts
- (2) Washers
- (3) Engine under cover