


Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine.

1. Leave the engine stop switch set to  (RUN).
2. Push the choke knob down all the way to fully OFF (B).
3. Open throttle fully.
4. Press the starter button for 5 seconds.
5. Then follow the normal starting procedure.
6. If the engine start, then open the throttle slightly if idling is unstable.
If the engine does not start, wait for 10 seconds, then follow steps 1 – 5 again.