


The battery (4) is in the battery box below the seat.

Removal:


1. Make sure the ignition switch is OFF.
2. Remove the seat (page 52).
3. Open the battery box cover (1).
4. Disconnect the negative (-) terminal lead (2) from the battery first, then disconnect the positive (+) terminal lead (3).
5. Pull out the battery (4) from the battery box.

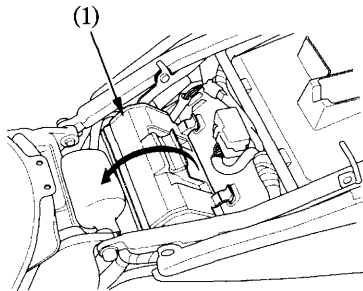

(1) Battery box cover

Installation:

1. Reinstall in the reverse order of removal. Be sure to connect the positive (+) terminal first, then the negative (-) terminal.
2. Check all bolts and other fasteners are secure.

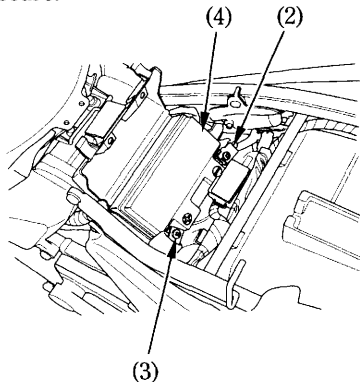

- (2) Negative (-) terminal lead
- (3) Positive (+) terminal lead
- (4) Battery