


WHEEL REMOVAL

(Refer to the maintenance precautions on page 65).

NOTE:

- * This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required, it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your Honda dealer for this service.

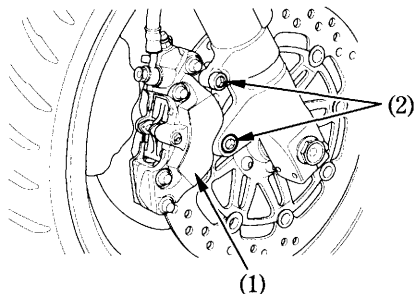

- (1) Brake caliper assembly
- (2) Fixing bolts

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the right and left caliper assembly (1) from the fork leg by removing the fixing bolts (2).

CAUTION:

- * To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.

